

Sequence of Soil Erosion Control:

1. Place silt fence and erosion control inlet filters (on existing structures) at locations shown on the plans or as directed by Engineer.
2. Maintain all erosion control measures in use throughout the project duration.
3. After final grading is complete, place topsoil and sodding in disturbed lawn areas.
4. Remove all temporary erosion control measures after significant growth has occurred.


NOTE: Contractor shall maintain all haul routes to prevent sediment from encroaching onto City and County major roads.

**Road Lengths:**

Hidden Valley Drive = 324.286	Telluride Drive = 315.943
Keystone Drive = 354.584	Timberline Drive = 3,627.564
Snowmass Drive = 4,743.974	Timberline Court = 382.005
Sunlight Drive = 2,243.357	<b>Total = 12,039.252 L.F./2.35 Mi</b>
Sunlight Court = 400.805	North Shadowwoods Curb Catch Basins = 55

**Legend**

- Parcel Lines
- Water Main
- Hydrant
- Storm Drain
- Storm Manhole
- Storm Inlet
- Sanitary Sewer
- Sanitary Manhole
- Edge of Pavement
- Silt Filter shall be placed in all Curb Inlets

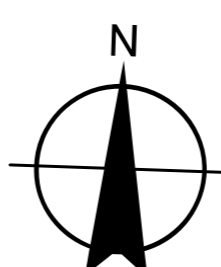

200 100 0 200 Feet

1 inch equals 100 feet

Shadow Woods Subdivision  
City File #E06-023/E07-001



City of  
**ROCHESTER HILLS**